

熱間圧延形鋼の形状，寸法，質量及びその許容差

正 誤 票

区分	位置	誤		正	
本体	表 18	標準断面寸法 ^{a)}	参考	標準断面寸法 ^{a)}	参考
		mm		mm	
		$H \times B$	重心の位置	$H \times B$	重心の位置
			cm		cm
			C_x		C_x
		475×350	10.3	475×350	12.5
			9.81		11.9
			9.28		11.4
			10.7		10.8
			10.2		12.9
			9.71		12.4
			9.34		11.7
			14.5		11.2
			13.9		10.8
		475×400	12.5	475×400	11.7
			11.9		11.1
			11.4		10.6
			10.8		10.0
			12.9		12.1
			12.4		11.6
			11.7		11.0
			11.2		10.5
			10.8		10.1
		500×250	11.7	500×250	15.5
	11.1		14.8		
	10.6		14.3		
	10.0		13.6		
	12.1		15.9		
	11.6		15.3		
	11.0		14.7		
	10.5		14.1		

区分	位置	誤	正
本体	表 18	標準断面寸法 ^{a)}	標準断面寸法 ^{a)}
		mm	mm
		$H \times B$	$H \times B$
		重心の位置	重心の位置
		cm	cm
		C_x	C_x
		500×300	500×300
		10.1	14.4
		15.5	13.7
		14.8	13.1
		14.3	12.5
		13.6	14.8
		15.9	14.2
		15.3	13.5
		14.7	13.0
		14.1	12.5
		500×350	500×350
		14.4	13.5
		13.7	12.8
		13.1	12.2
		12.5	11.6
		14.8	13.9
		14.2	13.3
		13.5	12.6
		13.0	12.0
		12.5	11.6

平成 27 年 7 月 1 日作成